



Thermoking Mp-4000



Defrosting

The Unit is programmed to automatically defrost. You are not required to do anything.

Programming Temperature

If nothing is displayed on the screen make sure genset is running, main circuit breaker is up in the on position; there is good plug connection and re press the power button on the face of the container. Press the F3 Button. Using F2 (up) and F3 (down) to select the desired setpoint. Hold the F4 button to accept. New setpoint will be displayed on the bottom right of the screen.

Alarm Codes

If the unit is malfunctioning or displaying any fault codes contact dispatch immediately. Write up a defect report for any alarm or fault codes when you return to the yard.

Zavcor Trucking Limited
3650 Eagle St Stevensville ON L0S 1S0
905-382-3444