



## Operating Container Reefer Units

### Carrier Transicold



### **Defrosting**

The Unit is programmed to automatically defrost. You are not required to do anything.

### **Programming Temperature**

If nothing is displayed on the screen make sure genset is running, main circuit breaker is up in the on position, there is good plug connection and switch on unit is in the on position. Using the up and down arrows select the desired temperature. Press the enter button to set. New setpoint will be displayed on the left screen

### **Alarm Codes**

**If the unit is malfunctioning or displaying any fault codes contact dispatch immediately.** Write up a defect report for any alarm or fault codes when you return to the yard.

Zavcor Trucking Limited  
3650 Eagle St Stevensville ON L0S 1S0  
905-382-3444